

Singer 9940 Sewing Machine Instruction Manual

CONTENTS

IMPORTANT SAFETY INSTRUCTIONS	2	ELASTIC STITCH SEWING	46
MODEL 9940	8	Quilting	48
FOR EUROPEAN AND SIMILAR TERRITORIES:	8	A. Joining the pieces of fabric	48
MAIN PARTS	10	B. Quilting	48
ACCESSORIES	12	C. Hand Look Quilting Stitch (No. 7)	48
DUST COVER	12	ZIGZAG STITCH SEWING	50
EXTENSION TABLE	14	MULTI-STITCH ZIGZAG	50
A. REMOVING THE EXTENSION TABLE	14	FREE ARM SEWING	50
B. OPENING THE ACCESSORY CASE	14	OVERCASTING-OVERLOCKING	52
CHANGING THE PRESSER FOOT	14	A. USING THE OVERCASTING FOOT	52
A. Changing the presser foot	14	B. USING THE GENERAL PURPOSE FOOT	52
B. Removing the presser foot holder	14	C. NOTE:	52
INSERTING THE NEEDLE	16	BLIND HEM STITCHING	54
FABRIC, THREAD AND NEEDLE TABLE	16	PATCH WORK	56
CONNECTING THE MACHINE	18	APPLIQUE	56
FUNCTION OF EACH PART	20	NARROW HEMMING	58
A. REVERSE STITCH BUTTON	20	CORDING	58
B. NEEDLE UP/DOWN BUTTON	20	A. SINGLE CORDING	58
C. SLOW SEWING BUTTON	20	B. TRIPLE CORDING	58
D. PRESSER FOOT LIFTER	20	INSERTING ZIPPERS	60
E. DROP FEED LEVER	20	CENTERED INSERTION	60
F. PRESSURE REGULATOR	20	LAPPED INSERTION	61
G. HAND WHEEL	20	A. TO OPEN THE ZIPPER WHILE STITCHING	62
H. TOP COVER	20	BUTTONHOLE SEWING	62
CONTROL PANEL	22	AUTOMATIC BAR-TACK AND DARNING	68
A. L.C.D. DISPLAY	22	SEWING ON BUTTONS	70
B. L.C.D. CONTRAST CONTROL	22	A. Thread Shank	70
C. PATTERN CHART	22	CONTINUOUS DECORATIVE PATTERN	72
D. UTILITY STITCH BUTTON	22	A. SEWING THIN FABRICS	72
E. DECORATIVE & LETTER STITCH BUTTON	22	USING THE EVEN-FEED FOOT	72
F. FUNCTION BUTTONS	22	A. ATTACHING THE EVEN-FEED FOOT	72
G. MODE BUTTONS	22	B. SEWING	72
H. SCROLL BUTTONS	22	DARNING/FREE-HAND EMBROIDERY	74
I. CURSOR BUTTON	22	A. ATTACHING THE DARNING/ EMBROIDERY FOOT	74
BOBBIN SETTING	24	B. DARNING	74
A. REMOVING THE BOBBIN	24	C. FREE-HAND EMBROIDERY	74
B. SETTING SPOOL OF THREAD ON SPOOL PIN	24	D. After darning or free-hand embroidery	74
C. WINDING THE BOBBIN	24	TWIN NEEDLE SEWING	76
D. INSERTING THE BOBBIN	26	DECORATIVE & LETTER STITCH SEWING ...	78
THREADING THE MACHINE	28	A. SELECTING DECORATIVE & LETTER STITCH	78
A. PREPARING TO THREAD MACHINE	28	B. TO CHANGE THE MODE	78
B. SETTING SPOOL OF THREAD ON SPOOL PIN	28	C. SHIFTING THE CURSOR	80
C. THREADING THE UPPER THREAD	28	D. TO CHECK SELECTED PATTERNS	80
D. THREADING THE NEEDLE EYE	30	E. INSERTING PATTERN	80
E. DRAWING UP THE BOBBIN THREAD	30	F. TO DELETE PATTERN	80
STARTING TO SEW	32	G. SETTING OF EACH PATTERN	82
A. START AND END OF SEAM	32	H. TWIN NEEDLE SETTING	84
B. REVERSE STITCHING	32	I. SINGLE / REPEAT SEWING	84
C. TURNING CORNERS	34	J. SEWING THE SELECTED PATTERN	84
D. SEWING HEAVY FABRIC	34	K. TIPS	84
E. SEWING OVER OVERLAPPED AREAS	34	DECORATIVE AND LETTER STITCH CHART	86
F. WIDTH OF SEAM ALLOWANCE	34	MAINTENANCE	88
ADJUSTING THE THREAD TENSIONS	36	CLEANING	88
SELECTING UTILITY STITCH PATTERN	38	HELPFUL HINTS	90
A. SELECTING THE PATTERN	38		
B. SETTING STITCH WIDTH AND LENGTH	38		
C. TWIN NEEDLE SETTING, MIRROR/ REVERSE STITCH AND ELONGATION	40		
WHERE TO USE EACH STITCH	42		
STRAIGHT STITCH SEWING	44		
A. Straight Stitch	44		
B. Straight Stitch With Auto-lock Stitch (Pattern No. A-3)	44		
BASTING	46		



[DOWNLOAD HERE](#)

Singer 9940 Sewing machine Instruction manual

[DOWNLOAD HERE](#)

Similar manuals:

[Sign To The Giesinger Waldhaus In The Snow Covered Forest Perlacher Forst Munich Germany](#)

[Willow , Wissinger Laber River Near Breitenbrunn, Upper Palatinate , Bavaria Germany](#)

[Male Singer](#)

[Male Singer](#)

[Singer](#)

[Minnesinger Fountain With Minstrel At The Rathausplatz Bad Kissingen Lower Franconia Bavaria Rhoen Mountains Germany](#)

[Kissinger Walhalla On Mt Altenberg In Bad Kissingen, Rhoen, Lower Franconia, Bavaria, Germany, Europe](#)

[Singer Sportshotel, Bergwang, Tyrol, Austria, Europe](#)

[Illustration, Painting, Singer](#)

[What The FACH?! ~ The Definitive Guide For Opera Singers Auditioning & Working In Germany, Austria, And Switzerland \(2nd Edition\). - Philip Shepard](#)

[Exposed Roots In Grimsinger Au, Danube, Wachau, Waldviertel, Forest Quarter, Lower Austria, Austria, Europe](#)

[Gravel Bar In Grimsinger Au, Schoenbuehel Monastery On The Danube, Wachau, Waldviertel, Forest Quarter, Lower Austria, Austria, Europe](#)

[Watstein Monument, Equestrian Statue Of Richard The Lionheart And The Singer Blondel Near Duernstein, Wachau Valley, Waldviertel Region, Lower Austria, Austria, Europe](#)

[Tables From The Beer Garden Of Maisinger Seehof, Lake Maising Near Maising, Community Of Poecking, Fuenfseenland, Five Lakes Region, Upper Bavaria, Bavaria, Germany, Europe, PublicGround](#)

[Singer With Microphone In Hand](#)

[Singer With Microphone In Hand](#)

[Art History, After Sherrie Levine - Howard Singerman](#)

[Stage Writers Handbook: A Complete Business Guide For Playwrights, Composers, Lyricists And Librettists - Dana Singer](#)

[Managing Multiple Projects: EBook Edition - , M.Ed. Dobson, Deborah Singer](#)

[The Juggling Act: Bringing Balance To Your Faith, Family, And Work - Pat Gelsinger](#)

[SINGER SEWING MACHINES 17-22&17-23 MANUAL](#)

[SINGER CLASSIC SEWING MACHINES 13k MANUAL](#)

[Singer Futura XL 550 Sewing Machine Service Manual](#)

[Singer 160 Anniversary Sewing Machine Service Manual](#)

[Singer 8280 Sewing Machine Service Manual](#)

[Singer 4166 Sewing Machine Service Manual](#)

[Singer 2662 Sewing Machine Service Manual](#)

[Singer 1525 Sewing Machine Service Manual](#)

[Singer 1507 Sewing Machine Service Manual](#)

[Singer Futura XL-400 FQ-4 Sewing Machine Service Manual](#)

[Singer 1408 1409 Sewing Machine Service Manual](#)

[Singer Touch-Tronic 200 Sewing Machine Instruction Manual](#)

[Singer Futura Ce200 Sewing Machine Instruction Manual](#)

[Singer Futura CE200 Sewing Machine Instruction Manual](#)

[Singer 7442 Sewing Machine Instruction Manual](#)

[Singer Inspiration 4206 4212 Instruction Manual](#)

[Singer 7462 Sewing Machine Instruction Manual](#)

[Singer 3400 Sewing Machine Instruction Manual](#)

[Singer 7468 Sewing Machine Instrution Manual](#)

[Singer 9910 Sewing Machine Instruction Manual](#)

[Singer 9920 Sewing Machine Instruction Manual](#)

[Singer 9940 Sewing Machine Instruction Manual](#)

[Singer 9910 9920 9940 Sewing Machine Service Manual](#)

[Singer 5400 Series Sewing Machine Service Manual](#)

[Singer Futura CE200E Sewing Machine Service Manual](#)

[Singer CE150 CE250 CE350 Sewing Machine Service Manual](#)

[Singer Futura CE100 CE200 Sewing Machine Service Manual](#)

[Singer 14SH744 14SH754 14CG744 14CG754 Service Manual](#)

[Singer Confidence 7463 7465 7467 7469 Service Manual](#)

