

2012 Nissan Cube Factory Service Manual

Edition: November 2011
 Publication No. SM2E-1Z12U0

QUICK REFERENCE INDEX

A GENERAL INFORMATION

B ENGINE

GI	General Information
EM	Engine Mechanical
LU	Engine Lubrication System
CO	Engine Cooling System
EC	Engine Control System
FL	Fuel System
EX	Exhaust System
STR	Starting System
ACC	Accelerator Control System

C ELECTRIC POWER TRAIN

D TRANSMISSION & DRIVELINE

CL	Clutch
TM	Transaxle & Transmission

E SUSPENSION

FAX	Front Axle
RAX	Rear Axle
FSJ	Front Suspension
RSU	Rear Suspension

F BRAKES

WT	Road Wheels & Tires
BR	Brake System
PB	Parking Brake System
BRK	Brake Control System

G STEERING

ST	Steering System
STC	Steering Control System

H RESTRAINTS

SB	Seat Belt
SBC	Seat Belt Control System
SR	SRS Airbag
SPC	SRS Airbag Control System

I VENTILATION, HEATER & AIR CONDITIONER

VTL	Ventilation System
HA	Heater & Air Conditioning System
HAC	Heater & Air Conditioning Control System

J BODY INTERIOR

INT	Interior
IP	Instrument Panel
SE	Seat

K BODY EXTERIOR, DOORS, ROOF & VEHICLE SECURITY

DLK	Door & Lock
SEC	Security Control System
GW	Glass & Window System
PWC	Power Window Control System

L DRIVER CONTROLS

EXT	Exterior
BDM	Body Repair
MIR	Mirrors
EXL	Exterior Lighting System
INL	Interior Lighting System
WW	Wiper & Washer
DEF	Defogger
HRN	Horn

M ELECTRICAL & POWER CONTROL

PWO	Power Outlet
BOS	Body Control System
LAN	LAN System
PCS	Power Control System
CHG	Charging System
PG	Power Supply, Ground & Circuit Elements
MWR	Meter, Warning Lamp & Indicator
WCS	Warning Chime System

N DRIVER INFORMATION & MULTIMEDIA

AV	Audio, Visual & Navigation System
CCS	Cruise Control System

O CRUISE CONTROL & DRIVER ASSISTANCE

P MAINTENANCE

MA	Maintenance
----	-------------

NISSAN
CUBE
MODEL Z12 SERIES

© 2011 NISSAN MOTOR CO., LTD.

All Rights Reserved. No part of this Service Manual may be reproduced or stored in a retrieval system, or transmitted in any form, or by any means, electronic, mechanical, recording or otherwise, without the prior written permission of NISSAN MOTOR CO., LTD.

A
 B
 C
 D
 E
 F
 G
 H
 I
 J
 K
 L
 M
 N
 O
 P

[DOWNLOAD HERE](#)

2012 NISSAN CUBE FACTORY SERVICE MANUAL USED BY TECHNICIANS AT THE DEALERSHIPS
TO MAINTAIN, SERVICE, DIAGNOSE AND REPAIR YOUR VEHICLE. COMPLETE STEP-BY-STEP
INSTRUCTIONS, DIAGRAMS, ILLUSTRATIONS, WIRING SCHEMATICS, AND SPECIFICATIONS TO
COMPLETELY REPAIR YOUR VEHICLE WITH EASE! YOU GET EVERYTHING YOU WILL EVER
NEED THROUGH BOOKS TO FIND WHAT YOU NEED. PRINT ONLY THE PAGES AND DIAGRAMS

YOU REQUIRE. NO MORE GREASY PAGES OR TORN LOST PAPER MANUALS AGAIN. ALL PAGES ARE PRINTABLE, SO PRINT OFF WHAT YOU NEED & TAKE IT WITH YOU TO YOUR VEHICLE OR WORKSHOP. YOU CAN BLOW-UP IMAGES AND THEN PRINT OFF ENLARGED COPIES! FACTORY HIGHLY DETAILED REPAIR MANUALS, WITH COMPLETE INSTRUCTIONS AND ILLUSTRATIONS, WIRING SCHEMATICS AND DIAGRAMS TO COMPLETELY SERVICE AND REPAIR YOUR VEHICLE.

QUICK REFERENCE INDEX A GENERAL INFORMATION GI General Information B ENGINE EM Engine Mechanical LU Engine Lubrication System CO Engine Cooling System EC Engine Control System FL Fuel System EX Exhaust System STR Starting System ACC Accelerator Control System C HYBRID HBC Hybrid Control System HBB Hybrid Battery System HBR Hybrid Brake System D TRANSMISSION & DRIVE- LINE CL Clutch System TM Transaxle & Transmission DLN Driveline FAX Front Axle RAX Rear Axle E SUSPENSION FSU Front Suspension RSU Rear Suspension SCS Suspension Control System WT Road Wheels & Tires F BRAKES BR Brake System PB Parking Brake System BRC Brake Control System G STEERING ST Steering System STC Steering Control System H RESTRAINTS SB Seat Belt SBC Seat Belt Control System SR SRS Airbag SRC SRS Airbag Control System I VENTILATION, HEATER & AIR CONDITIONER VTL Ventilation System HA Heater & Air Conditioning System HAC Heater & Air Conditioning Control System J BODY INTERIOR INT Interior IP Instrument Panel SE Seat ADP Automatic Drive Positioner K BODY EXTERIOR, DOORS, ROOF & VEHICLE SECURITY DLK Door & Lock SEC Security Control System GW Glass & Window System PWC Power Window Control System RF Roof EXT Exterior BRM Body Repair Manual L DRIVER CONTROLS MIR Mirrors EXL Exterior Lighting System INL Interior Lighting System WW Wiper & Washer DEF Defogger HRN Horn M ELECTRICAL & POWER CONTROL PWO Power Outlet BCS Body Control System LAN LAN System PCS Power Control System CHG Charging System PG Power Supply, Ground & Circuit Elements N DRIVER INFORMATION & MULTIMEDIA MWI Meter, Warning Lamp & Indicator WCS Warning Chime System SN Sonar System AV Audio, Visual & Navigation System O CRUISE CONTROL CCS Cruise Control System P MAINTENANCE MA Maintenance Format: PDF (Adobe Reader) Language: English Delivery: Download Compatibility: Any Windows or Mac (using Adobe Reader) Some bought files need to be extracted from zip or rar archive!

[DOWNLOAD HERE](#)

Similar manuals: