

Case Cx130 Cx160 Cx180 Excavator Service Manual

CX180 Crawler Excavators Table of Contents

DIVISION/SECTION	SECTION N°	REFERENCE N°
1 GENERAL INFORMATION		
Safety, general information and standard torque data	1001	7-27690GB
General specifications and special torque setting.....	1002	7-27714GB
2 ENGINE		
Removal and installation of the engine	2000	7-28220GB
Radiator and oil-cooler	2001	7-28040GB
Engine specifications	*	
Disassembly and assembly of the engine.....	*	
3 FUEL SYSTEM		
Fuel tank	3001	7-27970GB
Fuel engine system.....	*	
4 ELECTRICAL SYSTEM		
Electrical system, electrical and electronic troubleshooting.....	4001	7-27723GB
Inspection and maintenance of batteries and connecting a booster battery	4002	7-27921GB
Main and engine electronic control boxes.....	4003	7-27932GB
5 UNDERCARRIAGE		
Removal and installation of tracks	5001	7-27750GB
Rollers.....	5003	7-27771GB
Sprocket.....	5004	7-27781GB
Idler wheel and tension shock absorber	5005	7-27802GB
6 DRIVE TRAIN		
Drive motor and final drive transmission removal and installation	6001	7-27841GB
Drive motor and final drive transmission disassembly and assembly	6002	7-28090GB
Swing reduction gear, removal and installation.....	6003	7-29900GB
Swing reduction gear, disassembly and assembly	6004	7-28370GB
7 UNDERCARRIAGE HYDRAULICS		
8 UPPERSTRUCTURE HYDRAULICS		
Depressurising and decontaminating the hydraulic system, use of the vacuum pump and bleeding the components.....	8000	7-27952GB
Specifications, troubleshooting, checks and hydraulic pressure settings	8001	7-27703GB
Hydraulic reservoir removal and installation	8002	7-27990GB
Main and pilot pumps, removal and installation	8003	7-27871GB
Main hydraulic control valve, removal and installation	8004	7-27880GB
Attachment cylinders, removal and installation.....	8005	7-27791GB
Hydraulic swivel, removal and installation	8006	7-27811GB
Pilot blocs, removal and installation.....	8007	7-28130GB
Swing motor, removal and installation	8008	7-29890GB
Main hydraulic pump, disassembly and assembly.....	8010	9-35490FR
Main hydraulic control valve, disassembly and assembly.....	8011	7-28200FR
Attachment cylinders, disassembly and assembly.....	8012	7-27901GB
Hand control levers, disassembly and assembly	8013	7-28110GB
Foot control levers, disassembly and assembly	8014	7-28300FR
Six-solenoid valves, disassembly and assembly	8015	7-27911GB
Caution valve, disassembly and assembly	8016	7-27942GB
Safety vave	8017	7-29631GB
Hydraulic swivel, disassembly and assembly	8018	7-28080GB
Swing motor, disassembly and assembly	8019	7-28010GB
Hydraulic functions.....	8020	7-28481GB

CNH

Cre 9-36400GB

Copyright © 2003 CNH France SA
Printed in France
April 2003

[DOWNLOAD HERE](#)

CASE CX130 CX160 CX180 Excavator Service Manual Model Type: CX130 CX160 CX180 Engine Type: Isuzu 4BG1TRA- 01 Isuzu 4BG1TRA- 02 CONTENTS OF MANUAL: 01 GENERAL INFORMATION 02 ENGINE 03 FUEL SYSTEM 04 ELECTRICAL SYSTEM 05 UNDERCARRIAGE 06 DRIVE TRAIN 07

UNDERCARRIAGE HYDRAULICS 08 UPPER-STRUCTURE HYDRAULICS 09 UPPER-STRUCTURE
PAGES: 600 FORMAT: PDF, ZIP LANGUAGE: English Win95/98/ME/XP/vista/7/Linux/MAC We provide
various Repair Manual, Service manual, Workshop Manual, for Cars, Trucks, Industrial Equipment,
Heavy Equipment ...etc All in a pdf and software from various kinds of brand cars and motorcycles *

INSTANT DOWNLOAD * NO SHIPPING COST * NO NEED TO WAIT FOR A CD-ROM If you are looking
for a specific manual & cant find it then contact our customer support team via the Contact Seller link with
details of the required manual & we will do our absolute best to acquire it for you.

[DOWNLOAD HERE](#)

Similar manuals: