

Case Cx290 Excavator Service Manual

CX290 Crawler Excavators Table of contents

DIVISION/SECTION	SECTION No.	REFERENCE No.
1 GENERAL INFORMATION		
Safety, general information and standard torque data	1001	7-27690GB
General specifications and special torque setting.....	1002	9-36330GB
2 ENGINE		
Removal and installation of the engine	2000	9-43820GB
Radiator and oil-cooler	2001	9-44490GB
Engine specifications	*	
Disassembly and assembly of the engine.....	*	
3 FUEL SYSTEM		
Fuel tank	3001	7-27970GB
Fuel engine system.....	*	
4 ELECTRICAL SYSTEM		
Electrical system, electrical and electronic troubleshooting.....	4001	9-40330GB
Inspection and maintenance of batteries and connecting a booster battery	4002	9-43460GB
Main and engine electronic control boxes.....	4003	9-43450GB
5 UNDERCARRIAGE		
Removal and installation of tracks	5001	7-27750GB
Rollers.....	5003	9-42920GB
Sprocket.....	5004	9-36890GB
Idler wheel and tension shock absorber	5005	9-43000GB
6 DRIVE TRAIN		
Drive motor and final drive transmission removal and installation	6001	9-43140GB
Swing reduction gear, removal and installation.....	6003	9-44010GB
Swing reduction gear, disassembly and assembly	6004	9-43220GB
Travel reduction gear assembly and disassembly	6005	9-43150GB
7 UNDERCARRIAGE HYDRAULICS		
8 UPPERSTRUCTURE HYDRAULICS		
Depressurising and decontaminating the hydraulic system, use of the vacuum pump and bleeding the components.....	8000	9-44030GB
Specifications, troubleshooting, checks and hydraulic pressure settings	8001	9-36870GB
Hydraulic reservoir removal and installation	8002	7-27990GB
Main and pilot pumps, removal and installation	8003	9-44050GB
Main hydraulic control valve, removal and installation.....	8004	9-44410GB
Attachment cylinders, removal and installation.....	8005	7-27791GB
Hydraulic swivel, removal and installation	8006	7-27811GB
Pilot blocs, removal and installation	8007	7-28130GB
Swing motor, removal and installation	8008	9-44020GB
Main hydraulic pump, disassembly and assembly.....	8010	9-35491GB
Main hydraulic control valve, disassembly and assembly.....	8011	9-43550GB
Attachment cylinders, disassembly and assembly.....	8012	9-44420GB
Hand control levers, disassembly and assembly	8013	7-28110GB
Foot control levers, disassembly and assembly	8014	7-28210GB
Six-solenoid valves, disassembly and assembly	8015	9-43360GB
Caution valve, disassembly and assembly	8016	7-27942GB
Safety valve	8017	7-29631GB
Hydraulic swivel, disassembly and assembly	8018	7-28080GB
Swing motor, disassembly and assembly	8019	9-43440GB
Hydraulic functions.....	8020	9-43030GB
Travel hydraulic motor, disassembly and assembly	8021	9-43160GB

Case

Cre 9-44510GB

Copyright © 2002 Case France
Printed in France
April 2002

[DOWNLOAD HERE](#)

CASE CX290 Excavator Service Manual Model Type: CX290 Engine Type: Isuzu 6BGIT CONTENTS OF
MANUAL: 01 GENERAL INFORMATION 02 ENGINE 03 FUEL SYSTEM 04 ELECTRICAL SYSTEM 05
UNDERCARRIAGE 06 DRIVE TRAIN 07 UNDERCARRIAGE HYDRAULICS 08 UPPER-STRUCTURE

HYDRAULICS 09 UPPER-STRUCTURE PAGES: 582 FORMAT: PDF, ZIP LANGUAGE: English
Win95/98/ME/XP/vista/7/Linux/MAC We provide various Repair Manual, Service manual, Workshop Manual, for Cars, Trucks, Industrial Equipment, Heavy Equipment ...etc All in a pdf and software from various kinds of brand cars and motorcycles * INSTANT DOWNLOAD * NO SHIPPING COST * NO NEED TO WAIT FOR A CD-ROM If you are looking for a specific manual & cant find it then contact our customer support team via the Contact Seller link with details of the required manual & we will do our absolute best to acquire it for you.

[DOWNLOAD HERE](#)

Similar manuals: