

# 2012 Nissan Armada Factory Service Manual

Edition: August 2011 Revision: July 2012 Publication No. SM2E-1T60U2		QUICK REFERENCE INDEX	
<b>NISSAN ARMADA MODEL TA60 SERIES</b>	<b>A GENERAL INFORMATION</b>	GI	General Information
	<b>B ENGINE</b>	EM	Engine Mechanical
		LU	Engine Lubrication System
		CO	Engine Cooling System
		EC	Engine Control System
		FL	Fuel System
		EX	Exhaust System
		STR	Starting System
		ACC	Accelerator Control System
	<b>C HYBRID</b>	HBC	Hybrid Control System
		HBB	Hybrid Battery System
		HBR	Hybrid Brake System
	<b>D TRANSMISSION &amp; DRIVE- LINE</b>	TM	Transaxle & Transmission
		DLN	Driveline
		FAX	Front Axle
		RAX	Rear Axle
	<b>E SUSPENSION</b>	FSU	Front Suspension
		RSU	Rear Suspension
		SCS	Suspension Control System
		WT	Road Wheels & Tires
	<b>F BRAKES</b>	BR	Brake System
		PB	Parking Brake System
		BRC	Brake Control System
	<b>G STEERING</b>	ST	Steering System
		STC	Steering Control System
	<b>H RESTRAINTS</b>	SB	Seat Belt
		SBC	Seat Belt Control System
		SR	SRS Airbag
		SRC	SRS Airbag Control System
	<b>I VENTILATION, HEATER &amp; AIR CONDITIONER</b>	VTL	Ventilation System
		HA	Heater & Air Conditioning System
		HAC	Heater & Air Conditioning Control System
	<b>J BODY INTERIOR</b>	INT	Interior
		IP	Instrument Panel
		SE	Seat
		ADP	Automatic Drive Positioner
		AP	Adjustable Pedal
	<b>K BODY EXTERIOR, DOORS, ROOF &amp; VEHICLE SECURITY</b>	DLK	Door & Lock
		SEC	Security Control System
		GW	Glass & Window System
		PWC	Power Window Control System
		RF	Roof
		EXT	Exterior
		BRM	Body Repair Manual
		MIR	Mirrors
	<b>L DRIVER CONTROLS</b>	EXL	Exterior Lighting System
		INL	Interior Lighting System
		WW	Wiper & Washer
		DEF	Defogger
		HRN	Horn
		PWO	Power Outlet
		BCS	Body Control System
All rights reserved. No part of this Service Manual may be reproduced or stored in a retrieval system, or transmitted in any form, or by any means, electronic, mechanical, photo-copying, recording or otherwise, without the prior written permission of Nissan North America, Inc.	<b>M ELECTRICAL &amp; POWER CONTROL</b>	LAN	LAN System
		PCS	Power Control System
		CHG	Charging System
		PG	Power Supply, Ground & Circuit Elements
		MWI	Meter, Warning Lamp & Indicator
	<b>N DRIVER INFORMATION &amp; MULTIMEDIA</b>	WCS	Warning Chime System
		SN	Sonar System
		AV	Audio, Visual & Navigation System
	<b>O CRUISE CONTROL</b>	CCS	Cruise Control System
	<b>P MAINTENANCE</b>	MA	Maintenance

[DOWNLOAD HERE](#)

2012 NISSAN ARMADA FACTORY SERVICE MANUAL USED BY TECHNICIANS AT THE DEALERSHIPS TO MAINTAIN, SERVICE, DIAGNOSE AND REPAIR YOUR VEHICLE. COMPLETE STEP-BY-STEP INSTRUCTIONS, DIAGRAMS, ILLUSTRATIONS, WIRING SCHEMATICS, AND SPECIFICATIONS TO COMPLETELY REPAIR YOUR VEHICLE WITH EASE! YOU GET EVERYTHING YOU WILL EVER NEED THROUGH BOOKS TO FIND WHAT YOU NEED. PRINT ONLY THE PAGES

AND DIAGRAMS YOU REQUIRE. NO MORE GREASY PAGES OR TORN LOST PAPER MANUALS AGAIN. ALL PAGES ARE PRINTABLE, SO PRINT OFF WHAT YOU NEED & TAKE IT WITH YOU TO YOUR VEHICLE OR WORKSHOP. YOU CAN BLOW-UP IMAGES AND THEN PRINT OFF ENLARGED COPIES! FACTORY HIGHLY DETAILED REPAIR MANUALS, WITH COMPLETE INSTRUCTIONS AND ILLUSTRATIONS, WIRING SCHEMATICS AND DIAGRAMS TO COMPLETELY SERVICE AND REPAIR YOUR VEHICLE. QUICK REFERENCE INDEX A GENERAL INFORMATION GI General Information B ENGINE EM Engine Mechanical LU Engine Lubrication System CO Engine Cooling System EC Engine Control System FL Fuel System EX Exhaust System STR Starting System ACC Accelerator Control System C HYBRID HBC Hybrid Control System HBB Hybrid Battery System HBR Hybrid Brake System D TRANSMISSION & DRIVE- LINE CL Clutch System TM Transaxle & Transmission DLN Driveline FAX Front Axle RAX Rear Axle E SUSPENSION FSU Front Suspension RSU Rear Suspension SCS Suspension Control System WT Road Wheels & Tires F BRAKES BR Brake System PB Parking Brake System BRC Brake Control System G STEERING ST Steering System STC Steering Control System H RESTRAINTS SB Seat Belt SBC Seat Belt Control System SR SRS Airbag SRC SRS Airbag Control System I VENTILATION, HEATER & AIR CONDITIONER VTL Ventilation System HA Heater & Air Conditioning System HAC Heater & Air Conditioning Control System J BODY INTERIOR INT Interior IP Instrument Panel SE Seat ADP Automatic Drive Positioner K BODY EXTERIOR, DOORS, ROOF & VEHICLE SECURITY DLK Door & Lock SEC Security Control System GW Glass & Window System PWC Power Window Control System RF Roof EXT Exterior BRM Body Repair Manual L DRIVER CONTROLS MIR Mirrors EXL Exterior Lighting System INL Interior Lighting System WW Wiper & Washer DEF Defogger HRN Horn M ELECTRICAL & POWER CONTROL PWO Power Outlet BCS Body Control System LAN LAN System PCS Power Control System CHG Charging System PG Power Supply, Ground & Circuit Elements N DRIVER INFORMATION & MULTIMEDIA MWI Meter, Warning Lamp & Indicator WCS Warning Chime System SN Sonar System AV Audio, Visual & Navigation System O CRUISE CONTROL CCS Cruise Control System P MAINTENANCE MA Maintenance Format: PDF (Adobe Reader) Language: English Delivery: Download Compatibility: Any Windows or Mac (using Adobe Reader) Some bought files need to be extracted from zip or rar archive!

[DOWNLOAD HERE](#)

Similar manuals: