

Kenmore 385.19365 Sewing Machine Instruction Manual

TABLE OF CONTENTS

SECTION I. NAMES OF PARTS	
Cabinet and Tote bags	2
Names of Parts	2
Standard Accessories	4
Name of Parts	4
Available Accessories and Attachments	6
Extension Table	8
• Detaching extension table	8
• Free arm sewing	8
• Attaching extension table	8
SECTION II. GETTING READY TO SEW	
Connecting Machine to Power Supply	10
For Your Safety	10
Operating Instructions	10
Electronic Sewing Speed Control	10
• Speed control lever	10
• Foot control	10
Main Function of Buttons	12
Up/Down needle position button	12
Auto-lock button	12
Reverse button	12
Screen sharpness adjusting dial	12
Language selection dial	12
Mode key	14
Stitch width selection	14
Stitch length selection	14
Editing	14
Elongation key	14
Mirror image key	14
Message key	16
Twin needle	16
Memory key	16
Clear key	16
Stock/Call key	18
Direct pattern selection and number keys	18
• Direct pattern selection	18
• Number keys	18
Pattern Selection and Screen Indication	20
Number Key Selection	20
Normal/Resumption Mode	22
Buzzer	22
To Raise or Drop the Feed Dogs	24
Pressure Adjusting Lever	24
Presser Foot Lifter	24
Changing Needle	26
To Remove and Attach the Presser Foot	26
To Remove and Attach the Foot Holder	26
Selecting Needle and Fabric	28
Winding the Bobbin	32-36
• Removing the bobbin	32
• Setting up the bobbin winding	32
• To use the additional spool pin	32
• Setting up the spool	34
• Winding the bobbin	34
• Inserting the bobbin	36
Threading the Machine	38
• Threading the machine	38
• Needle threader	40
Drawing up the Bobbin Thread	42
Balanced thread tension	44
• Auto-thread tension	44
• Balanced thread tension	44
• Manual thread tension adjustment	44
SECTION III. BASIC SEWING	
Straight Stitch Sewing	46
• Starting to sew	46
• Changing sewing direction	46
• Finishing sewing	46
Using the Seam Guide on the Needle Plate	48
Turning Square Corners	48
Using the Quilting Guide	48
Sewing on Heavy Fabrics	48
Manual Stitch Length	50
Variable Needle Position	50
Various Utility Stitches	52
Basting	52
• Attaching the Embroidery foot	52
• Starting to sew	52
Automatic Reverse Stitch	54
Triple Stretch Stitch	54
Stretch Stitch	54
Auto-Lock Stitch	56
Saddle Stitch	56
Zigzag Stitches	56
• To change the width and length	56
Variation of Zigzag Stitches	58
Overcasting Stitch	58
Tricot Stitch	58
Knit Stitch	60
Overedge sewing I	60
Overedge sewing II	62
Overedge sewing III	62
Sewing Button	64
Automatic Buttonhole(BH1)	66-70
• Sewing preparation	66-68
• Starting to sew	68-70
Adjusting the Stitch Width and Density in Buttonholes	70
• To change the stitch width	70
• To change the stitch density	70
Automatic Buttonhole(BH2/BH3)	72
• BH2 sewing steps	72
• BH3 sewing steps	72
Adjusting the Stitch Width and Density in Buttonholes 2 and 3	72
• To change the stitch density	72
• Adjustment of the stitch width on buttonhole 2	72
• Adjustment of the stitch width on buttonhole 3	72
Corded Buttonhole	74
Zipper Sewing	76-78
• Attaching the zipper foot	76
• Fabric preparation	76

VI

[DOWNLOAD HERE](#)

Kenmore 385.19365 Sewing Machine Instruction Manual

[DOWNLOAD HERE](#)

Similar manuals:

[Machtkonstruktion Eines Schiedsrichters Im Sport Am Beispiel Basketball Erkl rt Anhand Des](#)

[Symbolischen Interaktionismus - Thomas Kaeckenmeister](#)

[Die Wegenutzung Nach Dem Hamburgischen Wegegesetz - Florian Käckenmester](#)