

# 2012 Nissan Pathfinder Factory Service Manual

Edition: August 2011 Revision: August 2012 Publication No. SM2E-1R51U2		<b>QUICK REFERENCE INDEX</b>		<b>A</b> <b>B</b> <b>C</b> <b>D</b> <b>E</b> <b>F</b> <b>G</b> <b>H</b> <b>I</b> <b>J</b> <b>K</b> <b>L</b> <b>M</b> <b>N</b> <b>O</b> <b>P</b>
<b>NISSAN PATHFINDER MODEL R51 SERIES</b>		<b>A GENERAL INFORMATION</b>	<b>GI General Information</b>	
		<b>B ENGINE</b>	<b>EM Engine Mechanical</b>	
			<b>LU Engine Lubrication System</b>	
			<b>CO Engine Cooling System</b>	
			<b>EC Engine Control System</b>	
			<b>FL Fuel System</b>	
			<b>EX Exhaust System</b>	
			<b>STR Starting System</b>	
			<b>ACC Accelerator Control System</b>	
		<b>C HYBRID</b>	<b>HBC Hybrid Control System</b>	
			<b>HBB Hybrid Battery System</b>	
			<b>HBR Hybrid Brake System</b>	
		<b>D TRANSMISSION &amp; DRIVE- LINE</b>	<b>TM Transaxle &amp; Transmission</b>	
			<b>DLN Driveline</b>	
			<b>FAX Front Axle</b>	
			<b>RAX Rear Axle</b>	
		<b>E SUSPENSION</b>	<b>FSU Front Suspension</b>	
			<b>RSU Rear Suspension</b>	
			<b>SCS Suspension Control System</b>	
			<b>WT Road Wheels &amp; Tires</b>	
		<b>F BRAKES</b>	<b>BR Brake System</b>	
			<b>PB Parking Brake System</b>	
			<b>BRC Brake Control System</b>	
		<b>G STEERING</b>	<b>ST Steering System</b>	
			<b>STC Steering Control System</b>	
		<b>H RESTRAINTS</b>	<b>SB Seat Belt</b>	
			<b>SBC Seat Belt Control System</b>	
			<b>SR SRS Airbag</b>	
			<b>SRC SRS Airbag Control System</b>	
		<b>I VENTILATION, HEATER &amp; AIR CONDITIONER</b>	<b>VTL Ventilation System</b>	
			<b>HA Heater &amp; Air Conditioning System</b>	
			<b>HAC Heater &amp; Air Conditioning Control System</b>	
		<b>J BODY INTERIOR</b>	<b>INT Interior</b>	
			<b>IP Instrument Panel</b>	
			<b>SE Seat</b>	
			<b>ADP Automatic Drive Positioner</b>	
			<b>AP Adjustable Pedal</b>	
		<b>K BODY EXTERIOR, DOORS, ROOF &amp; VEHICLE SECURITY</b>	<b>DLK Door &amp; Lock</b>	
			<b>SEC Security Control System</b>	
			<b>GW Glass &amp; Window System</b>	
			<b>PWC Power Window Control System</b>	
			<b>RF Roof</b>	
			<b>EXT Exterior</b>	
			<b>BRM Body Repair Manual</b>	
		<b>L DRIVER CONTROLS</b>	<b>MIR Mirrors</b>	
			<b>EXL Exterior Lighting System</b>	
			<b>INL Interior Lighting System</b>	
			<b>WW Wiper &amp; Washer</b>	
			<b>DEF Defogger</b>	
			<b>HRN Horn</b>	
		<b>M ELECTRICAL &amp; POWER CONTROL</b>	<b>PWO Power Outlet</b>	
			<b>BCS Body Control System</b>	
			<b>LAN LAN System</b>	
			<b>PCS Power Control System</b>	
			<b>CHG Charging System</b>	
			<b>PG Power Supply, Ground &amp; Circuit Elements</b>	
		<b>N DRIVER INFORMATION &amp; MULTIMEDIA</b>	<b>MWI Meter, Warning Lamp &amp; Indicator</b>	
			<b>WCS Warning Chime System</b>	
			<b>SN Sonar System</b>	
			<b>AV Audio, Visual &amp; Navigation System</b>	
		<b>O CRUISE CONTROL</b>	<b>CCS Cruise Control System</b>	
		<b>P MAINTENANCE</b>	<b>MA Maintenance</b>	

All rights reserved. No part of this Service Manual may be reproduced or stored in a retrieval system, or transmitted in any form, or by any means, electronic, mechanical, photo-copying, recording or otherwise, without the prior written permission of Nissan North America, Inc.

[DOWNLOAD HERE](#)

2012 NISSAN PATHFINDER FACTORY SERVICE MANUAL USED BY TECHNICIANS AT THE DEALERSHIPS TO MAINTAIN, SERVICE, DIAGNOSE AND REPAIR YOUR VEHICLE. COMPLETE STEP-BY-STEP INSTRUCTIONS, DIAGRAMS, ILLUSTRATIONS, WIRING SCHEMATICS, AND SPECIFICATIONS TO COMPLETELY REPAIR YOUR VEHICLE WITH EASE! YOU GET EVERYTHING YOU WILL EVER NEED THROUGH BOOKS TO FIND WHAT YOU NEED. PRINT ONLY THE PAGES

AND DIAGRAMS YOU REQUIRE. NO MORE GREASY PAGES OR TORN LOST PAPER MANUALS AGAIN. ALL PAGES ARE PRINTABLE, SO PRINT OFF WHAT YOU NEED & TAKE IT WITH YOU TO YOUR VEHICLE OR WORKSHOP. YOU CAN BLOW-UP IMAGES AND THEN PRINT OFF ENLARGED COPIES! FACTORY HIGHLY DETAILED REPAIR MANUALS, WITH COMPLETE INSTRUCTIONS AND ILLUSTRATIONS, WIRING SCHEMATICS AND DIAGRAMS TO COMPLETELY SERVICE AND REPAIR YOUR VEHICLE. QUICK REFERENCE INDEX A GENERAL INFORMATION GI General Information B ENGINE EM Engine Mechanical LU Engine Lubrication System CO Engine Cooling System EC Engine Control System FL Fuel System EX Exhaust System STR Starting System ACC Accelerator Control System C HYBRID HBC Hybrid Control System HBB Hybrid Battery System HBR Hybrid Brake System D TRANSMISSION & DRIVE- LINE CL Clutch System TM Transaxle & Transmission DLN Driveline FAX Front Axle RAX Rear Axle E SUSPENSION FSU Front Suspension RSU Rear Suspension SCS Suspension Control System WT Road Wheels & Tires F BRAKES BR Brake System PB Parking Brake System BRC Brake Control System G STEERING ST Steering System STC Steering Control System H RESTRAINTS SB Seat Belt SBC Seat Belt Control System SR SRS Airbag SRC SRS Airbag Control System I VENTILATION, HEATER & AIR CONDITIONER VTL Ventilation System HA Heater & Air Conditioning System HAC Heater & Air Conditioning Control System J BODY INTERIOR INT Interior IP Instrument Panel SE Seat ADP Automatic Drive Positioner K BODY EXTERIOR, DOORS, ROOF & VEHICLE SECURITY DLK Door & Lock SEC Security Control System GW Glass & Window System PWC Power Window Control System RF Roof EXT Exterior BRM Body Repair Manual L DRIVER CONTROLS MIR Mirrors EXL Exterior Lighting System INL Interior Lighting System WW Wiper & Washer DEF Defogger HRN Horn M ELECTRICAL & POWER CONTROL PWO Power Outlet BCS Body Control System LAN LAN System PCS Power Control System CHG Charging System PG Power Supply, Ground & Circuit Elements N DRIVER INFORMATION & MULTIMEDIA MWI Meter, Warning Lamp & Indicator WCS Warning Chime System SN Sonar System AV Audio, Visual & Navigation System O CRUISE CONTROL CCS Cruise Control System P MAINTENANCE MA Maintenance Format: PDF (Adobe Reader) Language: English Delivery: Download Compatibility: Any Windows or Mac (using Adobe Reader) Some bought files need to be extracted from zip or rar archive!

[DOWNLOAD HERE](#)

Similar manuals: