

Kenmore 1340 1345 1350 Sewing Machine Instruction Manual

TABLE OF CONTENTS

SECTION I. NAMES OF PARTS	Threading the Machine	38
Cabinet and Tote bags	• Threading the machine	38
Names of Parts	• Needle threader	40
Standard Accessories	Drawing up the Bobbin Thread	42
Name of Parts	Balanced thread tension	44
Available Accessories and Attachments	• Auto-thread tension	44
Extension Table	• Balanced thread tension	44
• Detaching extension table	• Manual thread tension adjustment	44
• Free arm sewing		
• Attaching extension table		
SECTION II. GETTING READY TO SEW	SECTION III. BASIC SEWING	
Connecting Machine to Power Supply	Straight Stitch Sewing	46
For Your Safety	• Starting to sew	46
Operating Instructions	• Changing sewing direction	46
Electronic Sewing Speed Control	• Finishing sewing	46
• Speed control lever	Using the Seam Guide on the Needle Plate	48
• Foot control	Turning Square Corners	48
Main Function of Buttons	Using the Quilting Guide	48
Up/Down needle position button	Sewing on Heavy Fabrics	48
Auto-lock button	Manual Stitch Length	50
Reverse button	Variable Needle Position	50
Screen sharpness adjusting dial	Various Utility Stitches	52
Language selection dial	Basting	52
Mode key	• Attaching the Embroidery foot	52
Stitch width selection	• Starting to sew	52
Stitch length selection	Automatic Reverse Stitch	54
Editing	Triple Stretch Stitch	54
Elongation key	Stretch Stitch	54
Mirror image key	Auto-Lock Stitch	56
Message key	Saddle Stitch	56
Twin needle	Zigzag Stitches	56
Memory key	• To change the width and length	56
Clear key	Variation of Zigzag Stitches	58
Stock/Call key	Overcasting Stitch	58
Direct pattern selection and number keys	Tricot Stitch	58
• Direct pattern selection	Knit Stitch	60
• Number keys	Overedge sewing I	60
Pattern Selection and Screen Indication	Overedge sewing II	62
Number Key Selection	Overedge sewing III	62
Normal/Resumption Mode	Sewing Button	64
Buzzer	Automatic Buttonhole(BH1)	66-70
To Raise or Drop the Feed Dogs	• Sewing preparation	66-68
Pressure Adjusting Lever	• Starting to sew	68-70
Presser Foot Lifter	Adjusting the Stitch Width and Density in Buttonholes	70
Changing Needle	• To change the stitch width	70
To Remove and Attach the Presser Foot	• To change the stitch density	70
To Remove and Attach the Foot Holder	Automatic Buttonhole(BH2/BH3)	72
Selecting Needle and Fabric	• BH2 sewing steps	72
Winding the Bobbin	• BH3 sewing steps	72
• Removing the bobbin	Adjusting the Stitch Width and Density in Buttonholes 2 and 3	72
• Setting up the bobbin winding	• To change the stitch density	72
• To use the additional spool pin	• Adjustment of the stitch width on buttonhole 2	72
• Setting up the spool	• Adjustment of the stitch width on buttonhole 3	72
• Winding the bobbin	Corded Buttonhole	74
• Inserting the bobbin	Zipper Sewing	76-78
	• Attaching the zipper foot	76
	• Fabric preparation	76

VI

[DOWNLOAD HERE](#)

Kenmore 1340 1345 1350 Sewing Machine Instruction Manual

[DOWNLOAD HERE](#)

Similar manuals:

Machtkonstruktion Eines Schiedsrichters Im Sport Am Beispiel Basketball Erklärt Anhand Des Symbolischen Interaktionismus - Thomas Kaeckenmeister

Die Wegenutzung Nach Dem Hamburgischen Wegegesetz - Florian Käckemester