

2012 Nissan Sentra Factory Service Manual

QUICK REFERENCE INDEX																																																																																	
Edition: May 2011 Revision: February 2013 Publication No. SM2E-1B16U3	<table><tr><td>A GENERAL INFORMATION</td><td>GI General Information</td></tr><tr><td>B ENGINE</td><td>EM Engine Mechanical</td></tr><tr><td></td><td>LU Engine Lubrication System</td></tr><tr><td></td><td>CO Engine Cooling System</td></tr><tr><td></td><td>EC Engine Control System</td></tr><tr><td></td><td>FL Fuel System</td></tr><tr><td></td><td>EX Exhaust System</td></tr><tr><td></td><td>ACC Accelerator Control System</td></tr><tr><td>C TRANSMISSION/ TRANSAXLE</td><td>CL Clutch</td></tr><tr><td></td><td>MT Manual Transaxle</td></tr><tr><td></td><td>CVT CVT</td></tr><tr><td>D DRIVELINE/AXLE</td><td>FAX Front Axle</td></tr><tr><td></td><td>RAX Rear Axle</td></tr><tr><td>E SUSPENSION</td><td>FSU Front Suspension</td></tr><tr><td></td><td>RSU Rear Suspension</td></tr><tr><td></td><td>WT Road Wheels & Tires</td></tr><tr><td>F BRAKES</td><td>BR Brake System</td></tr><tr><td></td><td>PB Parking Brake System</td></tr><tr><td></td><td>BRC Brake Control System</td></tr><tr><td>G STEERING</td><td>PS Power Steering System</td></tr><tr><td></td><td>STC Steering Control System</td></tr><tr><td>H RESTRAINTS</td><td>SB Seat Belts</td></tr><tr><td></td><td>SRS Supplemental Restraint System (SRS)</td></tr><tr><td>I BODY</td><td>BL Body, Lock & Security System</td></tr><tr><td></td><td>GW Glasses, Window System & Mirrors</td></tr><tr><td></td><td>RF Roof</td></tr><tr><td></td><td>EI Exterior & Interior</td></tr><tr><td></td><td>IP Instrument Panel</td></tr><tr><td></td><td>SE Seat</td></tr><tr><td>J AIR CONDITIONER</td><td>MTC Manual Air Conditioner</td></tr><tr><td>K ELECTRICAL</td><td>SC Starting & Charging System</td></tr><tr><td></td><td>LT Lighting System</td></tr><tr><td></td><td>DI Driver Information System</td></tr><tr><td></td><td>WW Wiper, Washer & Horn</td></tr><tr><td></td><td>BCS Body Control System</td></tr><tr><td></td><td>LAN LAN System</td></tr><tr><td></td><td>AV Audio Visual, Navigation & Telephone System</td></tr><tr><td></td><td>ACS Auto Cruise Control System</td></tr><tr><td></td><td>PG Power Supply, Ground & Circuit Elements</td></tr><tr><td>L MAINTENANCE</td><td>MA Maintenance</td></tr></table>	A GENERAL INFORMATION	GI General Information	B ENGINE	EM Engine Mechanical		LU Engine Lubrication System		CO Engine Cooling System		EC Engine Control System		FL Fuel System		EX Exhaust System		ACC Accelerator Control System	C TRANSMISSION/ TRANSAXLE	CL Clutch		MT Manual Transaxle		CVT CVT	D DRIVELINE/AXLE	FAX Front Axle		RAX Rear Axle	E SUSPENSION	FSU Front Suspension		RSU Rear Suspension		WT Road Wheels & Tires	F BRAKES	BR Brake System		PB Parking Brake System		BRC Brake Control System	G STEERING	PS Power Steering System		STC Steering Control System	H RESTRAINTS	SB Seat Belts		SRS Supplemental Restraint System (SRS)	I BODY	BL Body, Lock & Security System		GW Glasses, Window System & Mirrors		RF Roof		EI Exterior & Interior		IP Instrument Panel		SE Seat	J AIR CONDITIONER	MTC Manual Air Conditioner	K ELECTRICAL	SC Starting & Charging System		LT Lighting System		DI Driver Information System		WW Wiper, Washer & Horn		BCS Body Control System		LAN LAN System		AV Audio Visual, Navigation & Telephone System		ACS Auto Cruise Control System		PG Power Supply, Ground & Circuit Elements	L MAINTENANCE	MA Maintenance
A GENERAL INFORMATION	GI General Information																																																																																
B ENGINE	EM Engine Mechanical																																																																																
	LU Engine Lubrication System																																																																																
	CO Engine Cooling System																																																																																
	EC Engine Control System																																																																																
	FL Fuel System																																																																																
	EX Exhaust System																																																																																
	ACC Accelerator Control System																																																																																
C TRANSMISSION/ TRANSAXLE	CL Clutch																																																																																
	MT Manual Transaxle																																																																																
	CVT CVT																																																																																
D DRIVELINE/AXLE	FAX Front Axle																																																																																
	RAX Rear Axle																																																																																
E SUSPENSION	FSU Front Suspension																																																																																
	RSU Rear Suspension																																																																																
	WT Road Wheels & Tires																																																																																
F BRAKES	BR Brake System																																																																																
	PB Parking Brake System																																																																																
	BRC Brake Control System																																																																																
G STEERING	PS Power Steering System																																																																																
	STC Steering Control System																																																																																
H RESTRAINTS	SB Seat Belts																																																																																
	SRS Supplemental Restraint System (SRS)																																																																																
I BODY	BL Body, Lock & Security System																																																																																
	GW Glasses, Window System & Mirrors																																																																																
	RF Roof																																																																																
	EI Exterior & Interior																																																																																
	IP Instrument Panel																																																																																
	SE Seat																																																																																
J AIR CONDITIONER	MTC Manual Air Conditioner																																																																																
K ELECTRICAL	SC Starting & Charging System																																																																																
	LT Lighting System																																																																																
	DI Driver Information System																																																																																
	WW Wiper, Washer & Horn																																																																																
	BCS Body Control System																																																																																
	LAN LAN System																																																																																
	AV Audio Visual, Navigation & Telephone System																																																																																
	ACS Auto Cruise Control System																																																																																
	PG Power Supply, Ground & Circuit Elements																																																																																
L MAINTENANCE	MA Maintenance																																																																																
NISSAN SENTRA MODEL B16 SERIES																																																																																	
© 2011 NISSAN NORTH AMERICA, INC. All rights reserved. No part of this Service Manual may be reproduced or stored in a retrieval system, or transmitted in any form, or by any means, electronic, mechanical, photo-copying, recording or otherwise, without the prior written permission																																																																																	

[DOWNLOAD HERE](#)

2012 NISSAN SENTRA FACTORY SERVICE MANUAL USED BY TECHNICIANS AT THE DEALERSHIPS TO MAINTAIN, SERVICE, DIAGNOSE AND REPAIR YOUR VEHICLE. COMPLETE STEP-BY-STEP INSTRUCTIONS, DIAGRAMS, ILLUSTRATIONS, WIRING SCHEMATICS, AND SPECIFICATIONS TO COMPLETELY REPAIR YOUR VEHICLE WITH EASE! YOU GET EVERYTHING YOU WILL EVER NEED THROUGH BOOKS TO FIND WHAT YOU NEED. PRINT ONLY THE PAGES AND DIAGRAMS YOU REQUIRE. NO MORE GREASY PAGES OR TORN LOST PAPER MANUALS

AGAIN. ALL PAGES ARE PRINTABLE, SO PRINT OFF WHAT YOU NEED & TAKE IT WITH YOU TO YOUR VEHICLE OR WORKSHOP. YOU CAN BLOW-UP IMAGES AND THEN PRINT OFF ENLARGED COPIES! FACTORY HIGHLY DETAILED REPAIR MANUALS, WITH COMPLETE INSTRUCTIONS AND ILLUSTRATIONS, WIRING SCHEMATICS AND DIAGRAMS TO COMPLETELY SERVICE AND REPAIR YOUR VEHICLE. QUICK REFERENCE INDEX A GENERAL INFORMATION GI General Information B ENGINE EM Engine Mechanical LU Engine Lubrication System CO Engine Cooling System EC Engine Control System FL Fuel System EX Exhaust System STR Starting System ACC Accelerator Control System C HYBRID HBC Hybrid Control System HBB Hybrid Battery System HBR Hybrid Brake System D TRANSMISSION & DRIVE- LINE CL Clutch System TM Transaxle & Transmission DLN Driveline FAX Front Axle RAX Rear Axle E SUSPENSION FSU Front Suspension RSU Rear Suspension SCS Suspension Control System WT Road Wheels & Tires F BRAKES BR Brake System PB Parking Brake System BRC Brake Control System G STEERING ST Steering System STC Steering Control System H RESTRAINTS SB Seat Belt SBC Seat Belt Control System SR SRS Airbag SRC SRS Airbag Control System I VENTILATION, HEATER & AIR CONDITIONER VTL Ventilation System HA Heater & Air Conditioning System HAC Heater & Air Conditioning Control System J BODY INTERIOR INT Interior IP Instrument Panel SE Seat ADP Automatic Drive Positioner K BODY EXTERIOR, DOORS, ROOF & VEHICLE SECURITY DLK Door & Lock SEC Security Control System GW Glass & Window System PWC Power Window Control System RF Roof EXT Exterior BRM Body Repair Manual L DRIVER CONTROLS MIR Mirrors EXL Exterior Lighting System INL Interior Lighting System WW Wiper & Washer DEF Defogger HRN Horn M ELECTRICAL & POWER CONTROL PWO Power Outlet BCS Body Control System LAN LAN System PCS Power Control System CHG Charging System PG Power Supply, Ground & Circuit Elements N DRIVER INFORMATION & MULTIMEDIA MWI Meter, Warning Lamp & Indicator WCS Warning Chime System SN Sonar System AV Audio, Visual & Navigation System O CRUISE CONTROL CCS Cruise Control System P MAINTENANCE MA Maintenance Format: PDF (Adobe Reader) Language: English Delivery: Download Compatibility: Any Windows or Mac (using Adobe Reader) Some bought files need to be extracted from zip or rar archive!

[DOWNLOAD HERE](#)

Similar manuals: